

ALLDOCUBE NFE T811MAN

File

[Firmware + bootloader](#)

Unlock Bootloader

1. go in settings and urn on developer option
2. unlocking "oem"
3. activated adb

```
adb reboot bootloader
```

```
fastboot flashing unlock
```

on device press volume down (you have 3second)

```
fastboot flashing unlock_critical
```

on device press volume down (you have 3second)

Flash December Firmware

Download the december firmware on : [Alldocube Firmware](#)

unrar folder and go in.

Install Firmware

```
cd ~/rooting_tablette/Firmware/T811MAN_NFE_DECEMBER
```

```
fastboot flash super super.img
```

```
fastboot reboot
```

Flash Bootloader and Firmware

```
adb reboot bootloader
```

install Bootloader

```
cd ~/rooting_tablette/Firmware/T811MAN_NFE_R00T
```

install Bootloader

```
fastboot flash boot magisk_patched-27000_MR09X.img
```

unlock Bootloader verification

```
fastboot --disable-verity --disable-verification flash vbmeta_a vbmeta_a.original.img  
fastboot --disable-verity --disable-verification flash vbmeta_b vbmeta_a.original.img
```

install Firmware

```
fastboot flash super superRW-WORK.img
```

Clear partition

```
fastboot reboot fastboot
```

```
fastboot erase userdata && fastboot erase metadata && fastboot reboot
```

on device when in reboot on fastbootd choose "Reboot to bootloader"

Force reboot at end

Finish installation

1. go in settings and turn on developer option
2. unlocking "oem"
3. activated adb
4. install magisk and launch app

```
adb install Magisk-v27.0.apk
```

Revision #12

Created 21 May 2024 08:35:43 by Foufure

Updated 7 June 2024 09:22:26 by Foufure